


EddyCus[®] inline FAW – Fiber Areal Weight Measurement

P_FAW_20

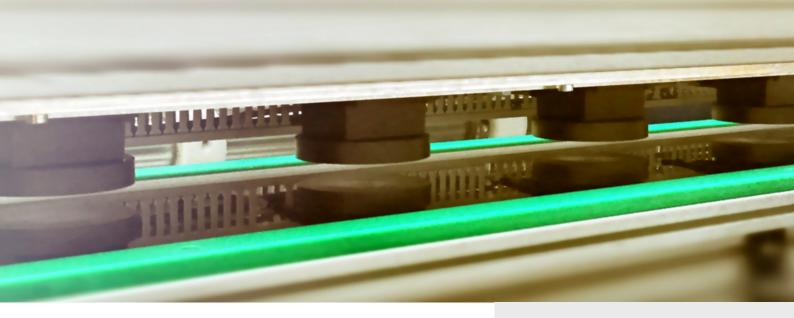

Fiber Weight Measurement for Carbon Fibers

The **EddyCus® inline FAW** is specifically designed for the inline monitoring of **fiber areal weight** of carbon fabrics.

The spreading process of CF tows or processing of chopped fibers or nonwovens can be evaluated online **without contact with fabric**.

Each sensor observes a particular lane of the web so by arraying multiple sensors, the entire Web width can be monitored.

This non-destructive testing solution is independent of the presence of **resin**, **binder or thermoplastic matrix**.

Carbon volume fraction of intermediates such as thermoset prepregs or organic sheets can be measured

Hence, the EddyCus® inline FAW is ideal for monitoring pultruding processes.

The SURAGUS testing solution supports the improvement of product quality by direct **process control**, by increasing **material yield**, and by conducting incoming and outgoing **goods inspection**.

SURAGUS GmbH Maria-Reiche-Straße 1 01109 Dresden Germany


+49 351/32 111 520 info@suragus.com

www.suragus.com www.carbon-fiber-testing.com www.suragus.com/FAQ www.suragus.com/inlineFAW

Engineered and Made in Germany



EddyCus® inline FAW – Fiber Areal Weight Measurement

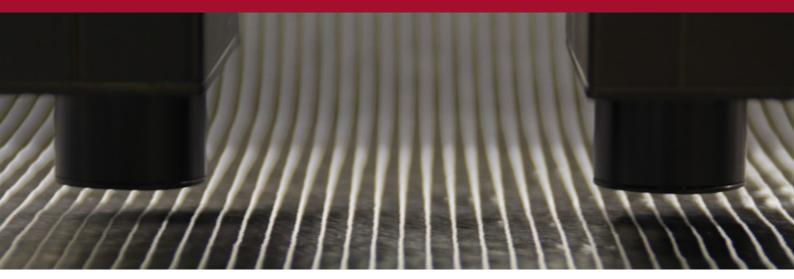

Sample rate	1 - 500 measurements per second 1 measurement/mm @ 200m/h production speed
Measurement / Scanning area	1 - 8 sensors across each 100mm in diameter
Web fluttering tolerance	1 mm
Interface	e.g. UDP, TCP/IP, Analog IO
Required space	Small (approx. 300 mm in production line)
Mode	Process control with uplink to PLC or production control system Quality report
Carbon fiber materials	CF non-woven, CF UD-tapes, CF non-crimp fabrics (NCF), flat CF preforms, conductive coatings

Quantitative Measurement

Applications

- ► Non-contact determination of carbon fiber areal weight
- ► Non-destructive measurement of carbon fiber volume fraction
- Evaluation of conductive coating
- ▶ Suitable for non-woven CF fabrics or recycled short CF, CF, UD tapes

Benefits

- ▶ Non-contact, coupling-media free
- Penetration of all layers
- Applicable to carbon fabrics
- Adaptive system
- Presence of binder or matrix irrelevant

Software and Handling

- High usability
- Intuitive design/handling
- High speed measurement and display of results
- Data archiving



Fiber Areal Weight monitoring of 6 lanes. Roll report listing locations with ok and not-ok material.